


INSTALLATION INSTRUCTIONS





BMW 3 SERIES ESTATE 2013

BMW-3SER-E-C

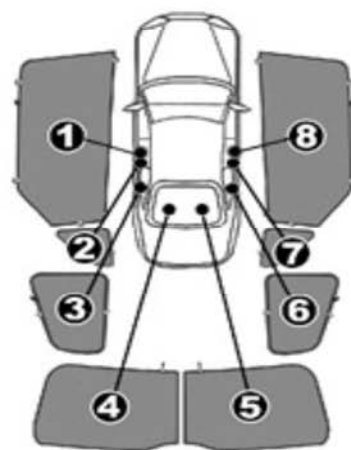

COMPONENTS INCLUDED


SHADES

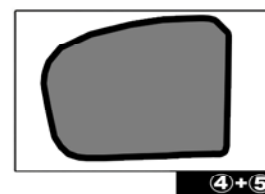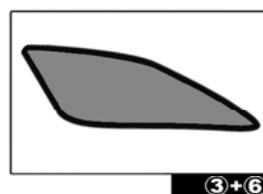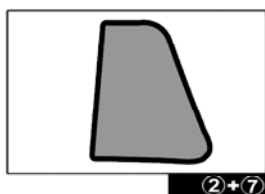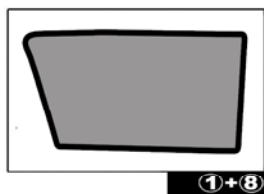


FIXING CLIPS




CL-MO2 x2

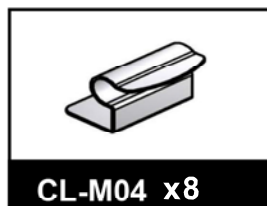

CL-M04 x8




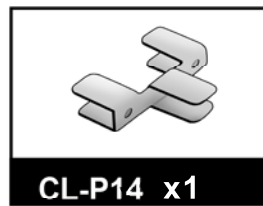


CL-P14 x1








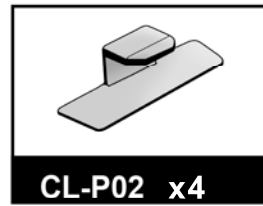


CL-P02 x4




SIDE SHADE INSTALLATION

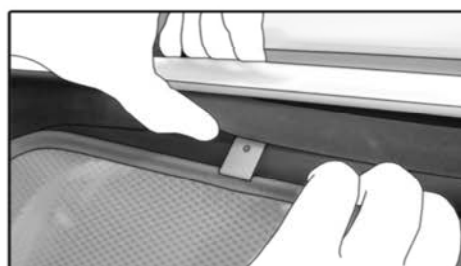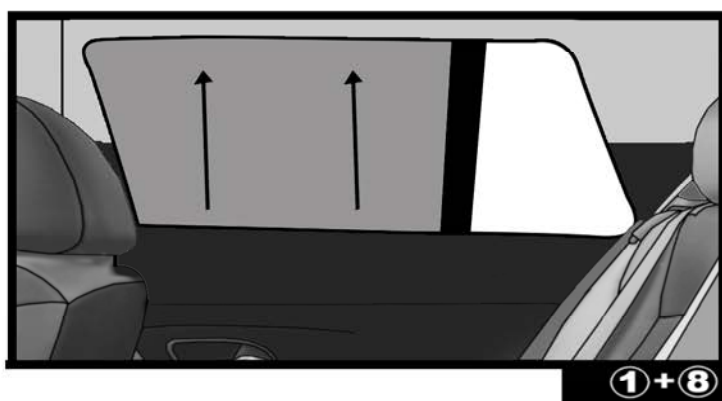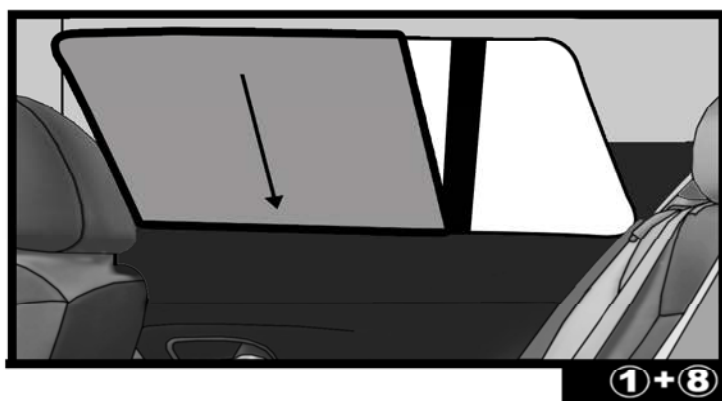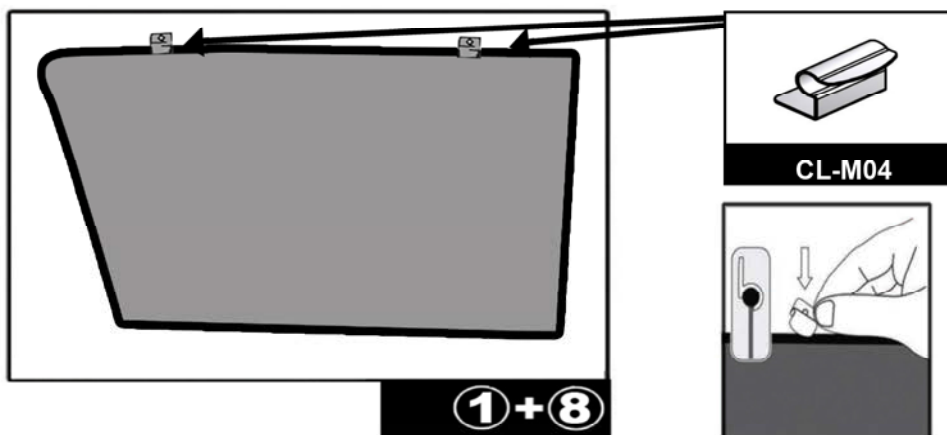


SIDE SHADE INSTALLATION

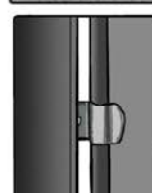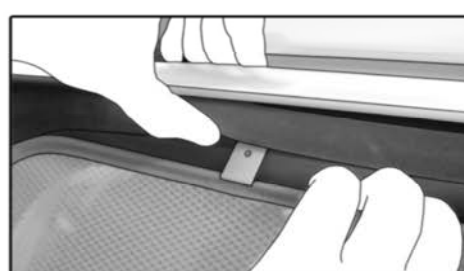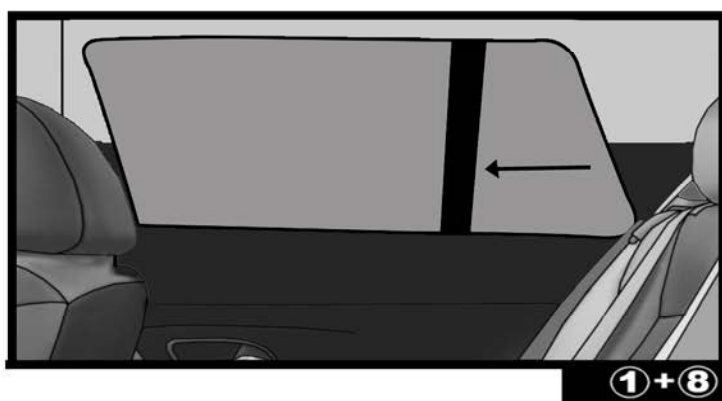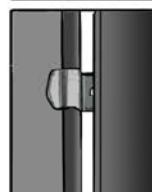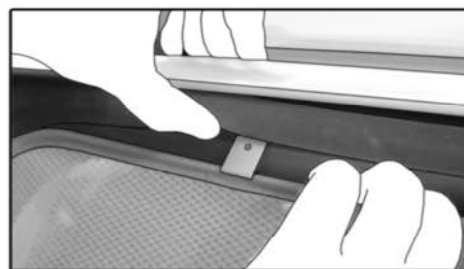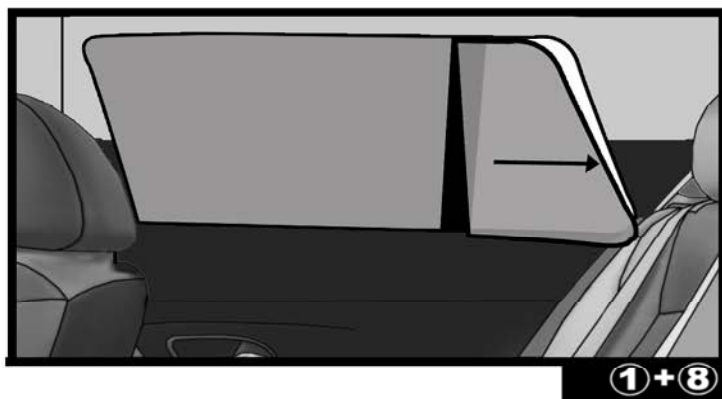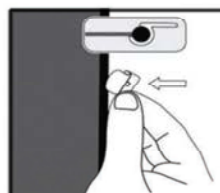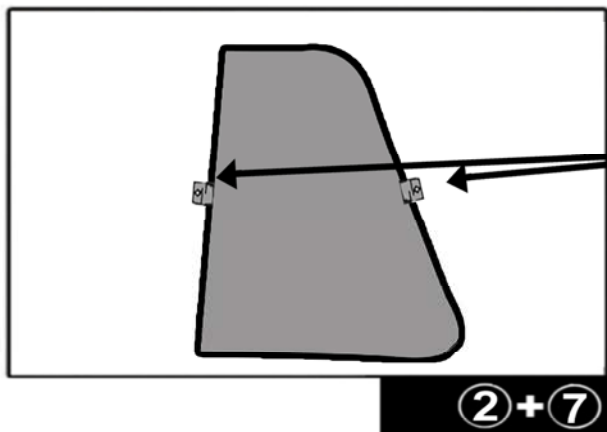


QUARTER LIGHT SHADE INSTALLATION

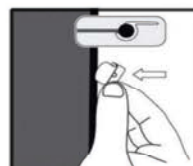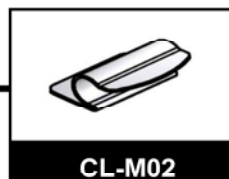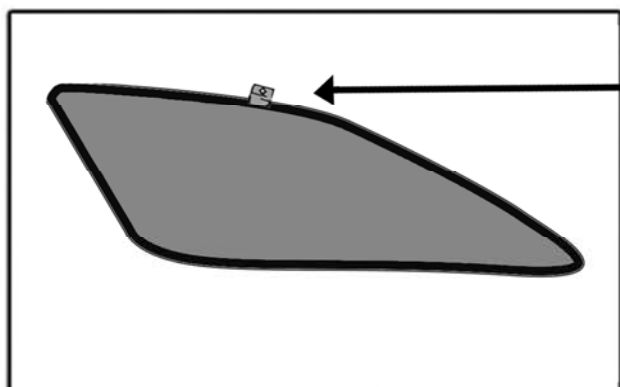


③+⑥

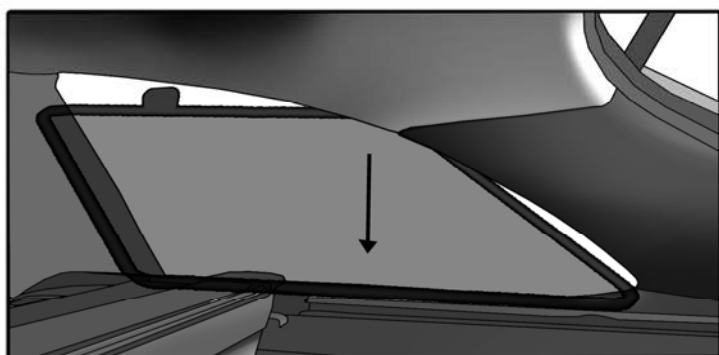



③+⑥

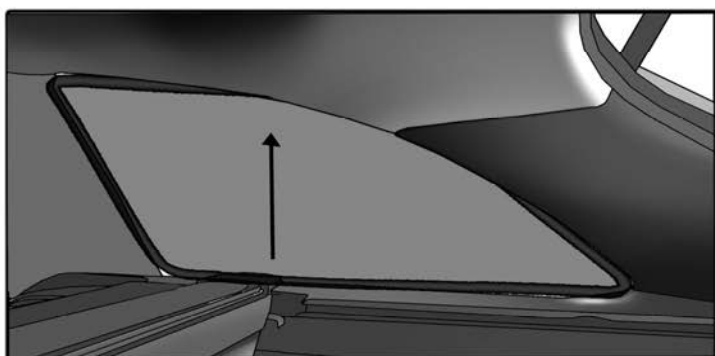

③+⑥

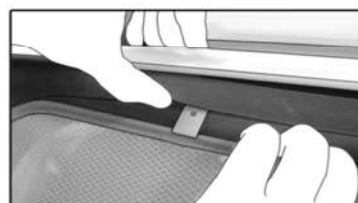

REAR SHADE INSTALLATION

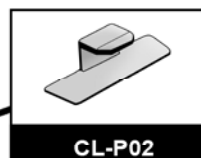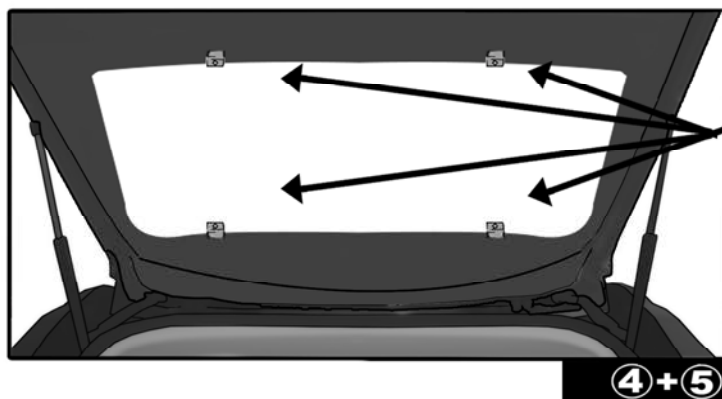

Use Adhesion Promotor

