
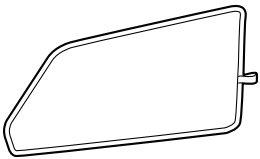
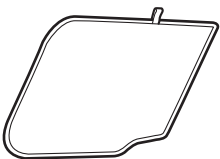
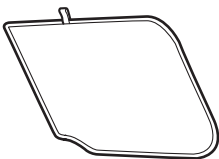
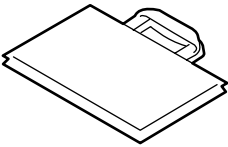






Parts List

Side sunshades (2)	Right rear sunshade	Left rear sunshade
		
Bag	Cleaner	Primer
		
Frame clips (12)	Glass clips (2)	Quarter sunshades (2)
		

Tools and Supplies Required


- Scale
- Felt-tip pen
- Masking tape

Before You Begin

Customer Information

- In these instructions, the illustrations show the left side sunshade being installed. The same procedure applies to the right side sunshade.
- This kit should only be installed if the ambient air temperature is 15°C (60°F) or above. Heat the bonding surfaces with a hair dryer set on LOW when the ambient air temperature is below 15°C (60°F).
- Before attaching the sunshades, thoroughly clean the bonding surfaces with a cleaner.
- Be extremely careful not to damage the body.


Illustration of the Components on the Vehicle

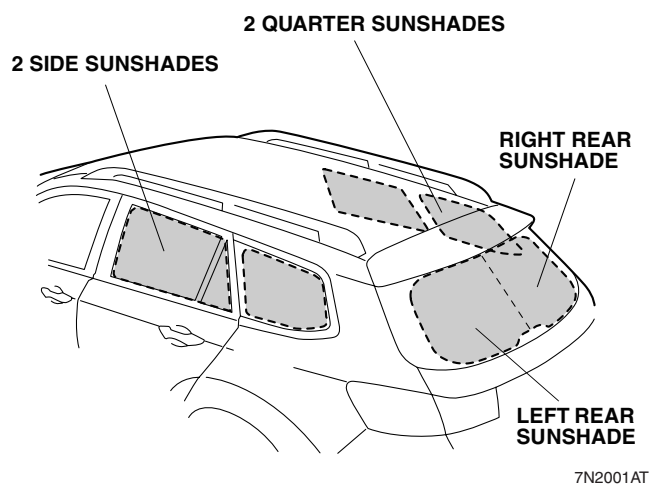


Installation

Installing the Side Sunshade


1. Open the left rear door.
2. Check the positions where the frame clips are installed and clean the surfaces with the cleaner provided from the kit.

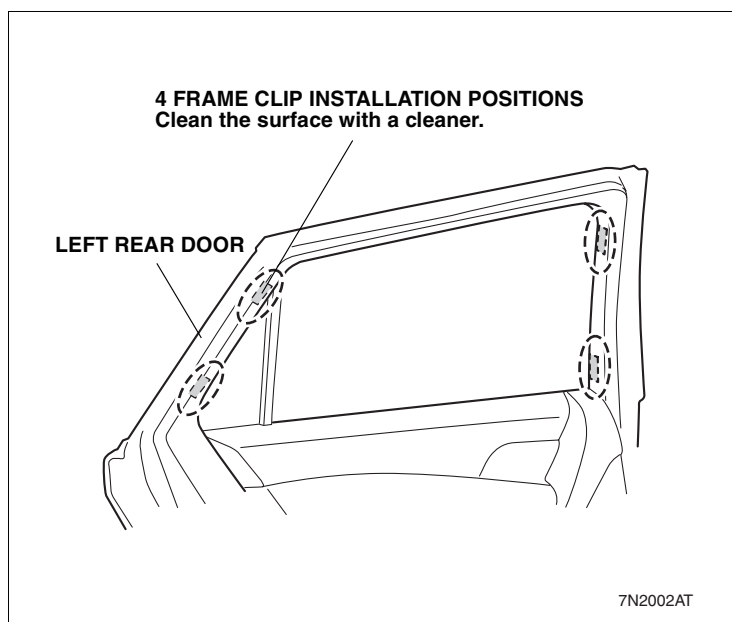


3. Using a felt-tip pen, make two marks in the positions shown.

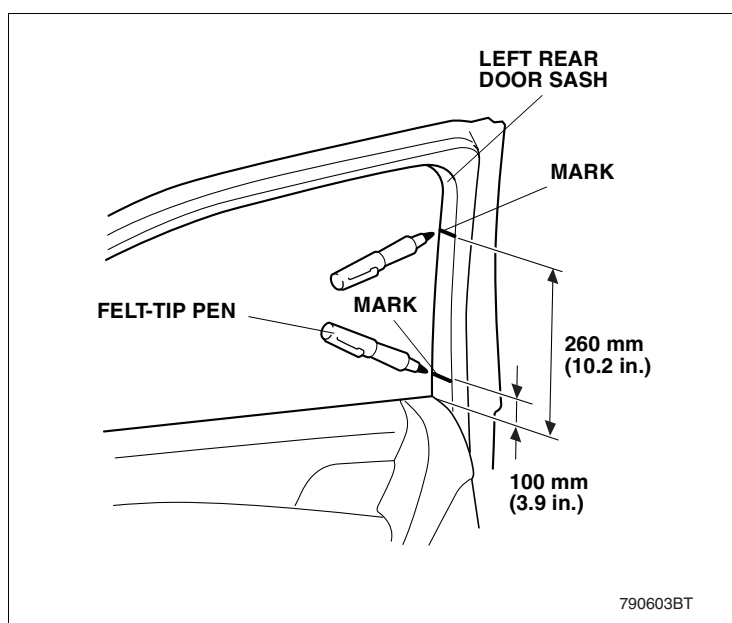


4. Using a felt-tip pen, make two marks in the positions shown.

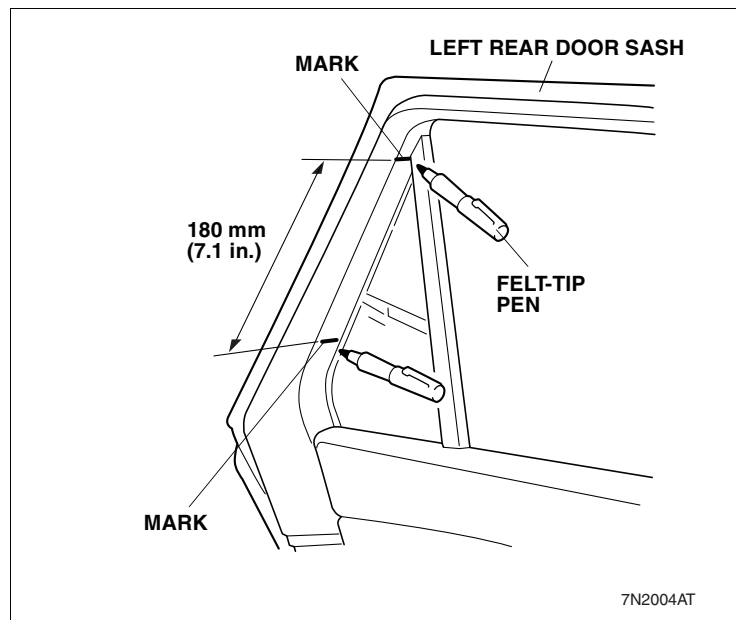


5. Temporarily position the frame clip on the left rear door sash aligning the end of the frame clip with the marks you made in step 3 and attach the pieces of masking tape as shown.

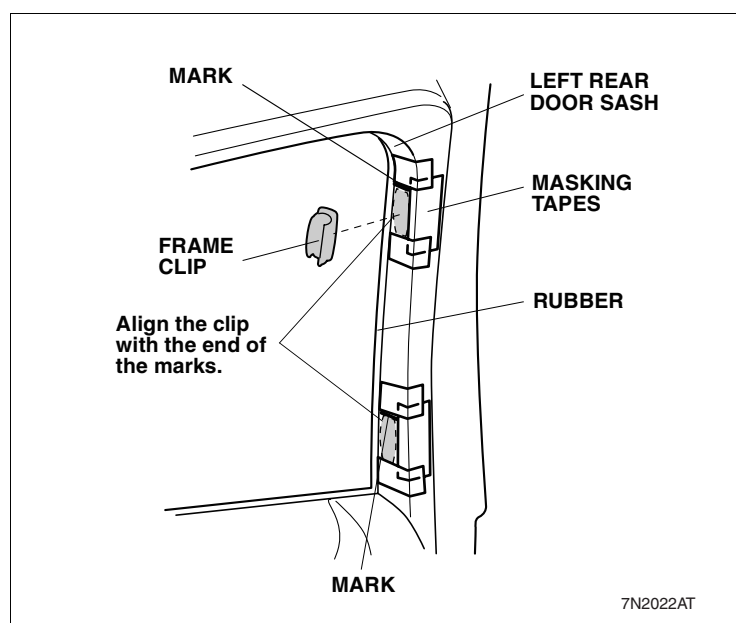


6. Temporarily position the frame clip on the left rear door sash aligning the end of the frame clip with the marks you made in step 4 and attach the pieces of masking tape as shown.

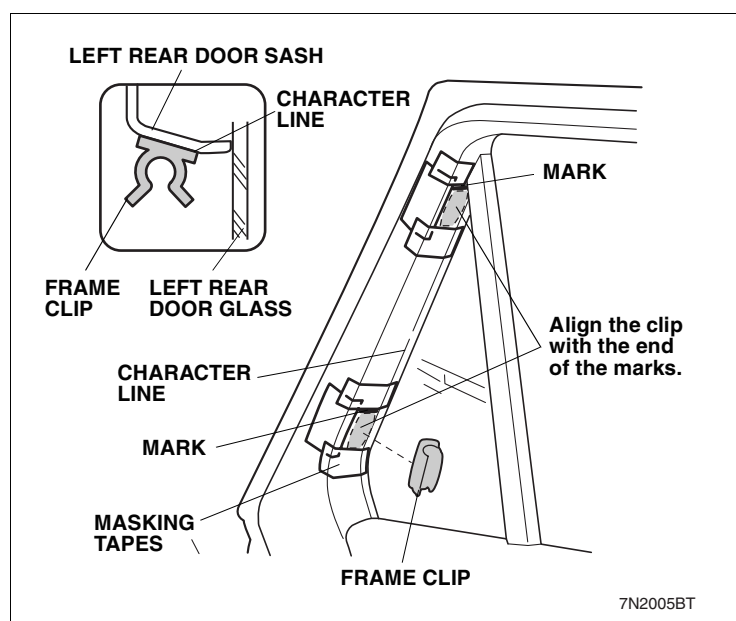


7. Apply primer to the parts of the door sash enclosed with the masking tapes and let it dry thoroughly.

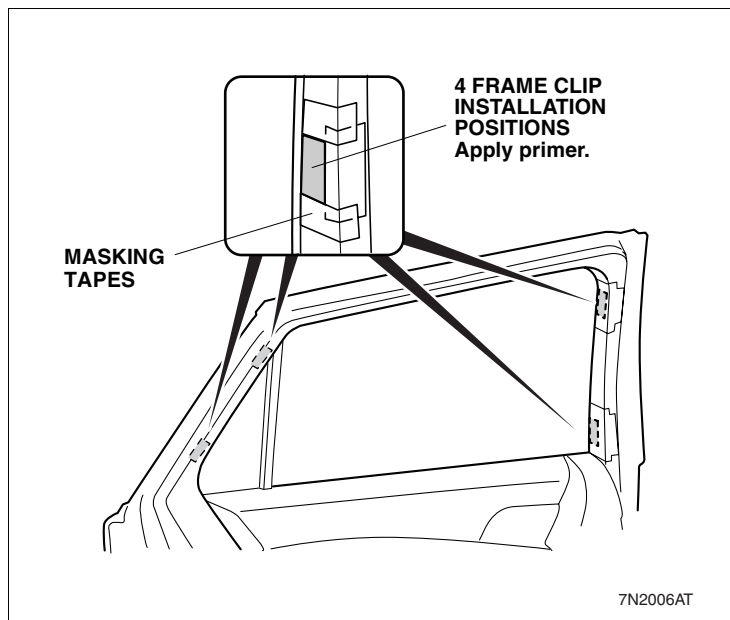


8. Remove the adhesive backing from each frame clip to install in the positions shown.
- Note the installation direction of the frame clips.

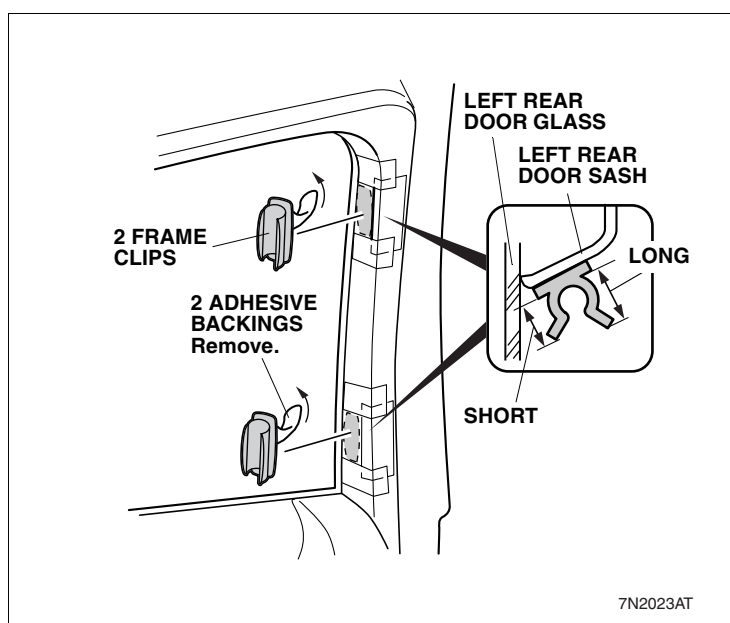

9. Remove the adhesive backing from each frame clip to install in the positions shown.
- Note the installation direction of the frame clips.
10. Remove the masking tapes.
11. Erase the marks.

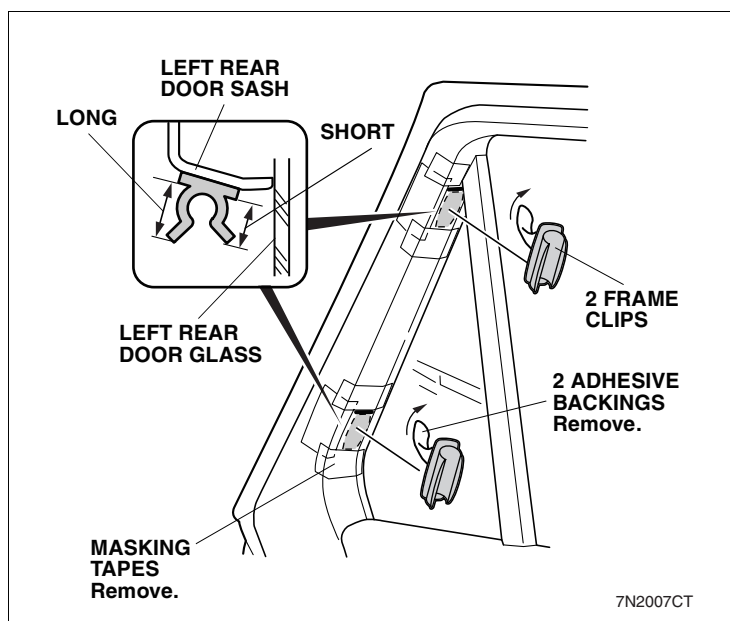


12. Install the side sunshade on the four frame clips in the numbered sequence of **1** through **4**.
13. Repeat the same work on the other side.

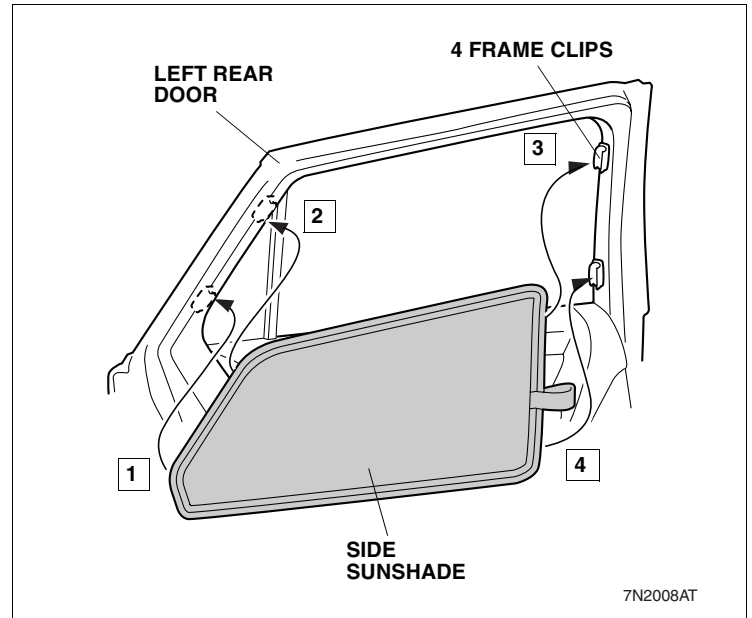


Installing the Quarter Sunshade


14. Check the positions where the frame clip and glass clip are installed and clean the surfaces with the cleaner provided from the kit.

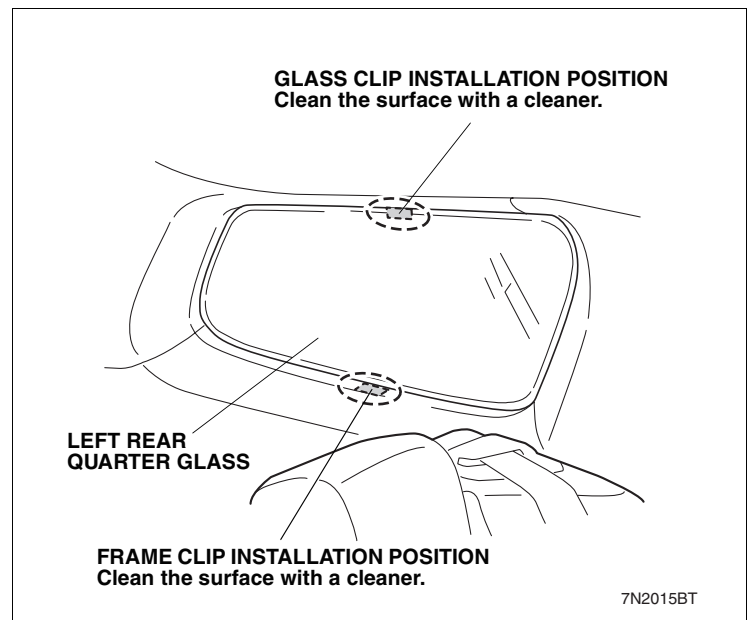


15. Using a felt-tip pen, make two marks in the positions shown.

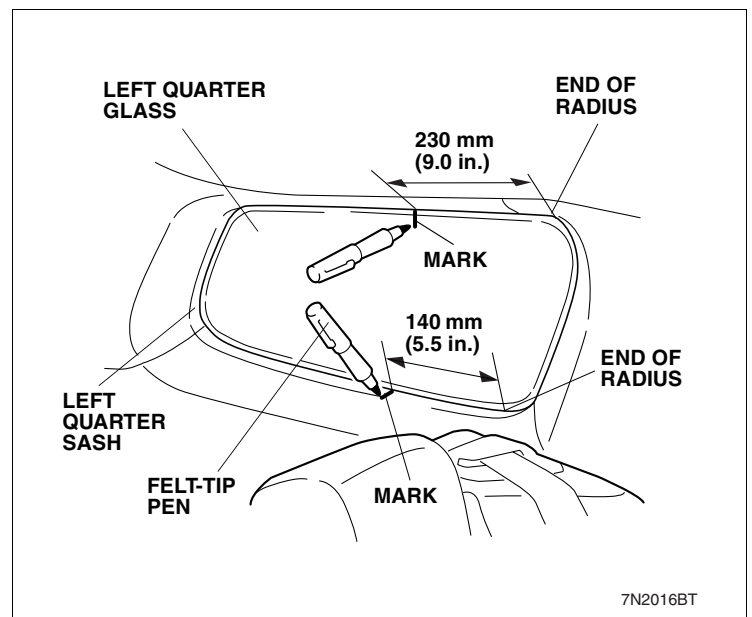


16. Temporarily position the frame clip on the left quarter sash aligning the end of the frame clip with the mark you made in step 15 and attach the pieces of masking tape as shown.

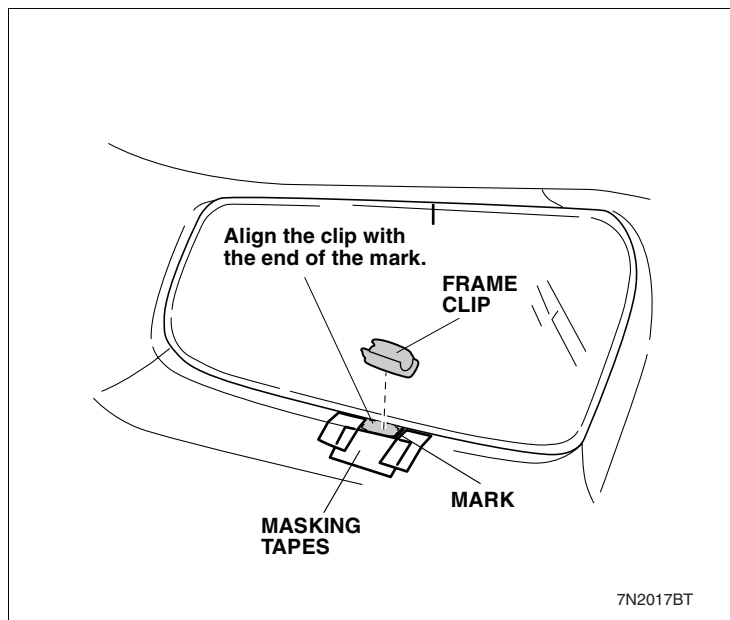


17. Apply primer to the parts of the left quarter sash enclosed with the masking tapes and let it dry thoroughly.

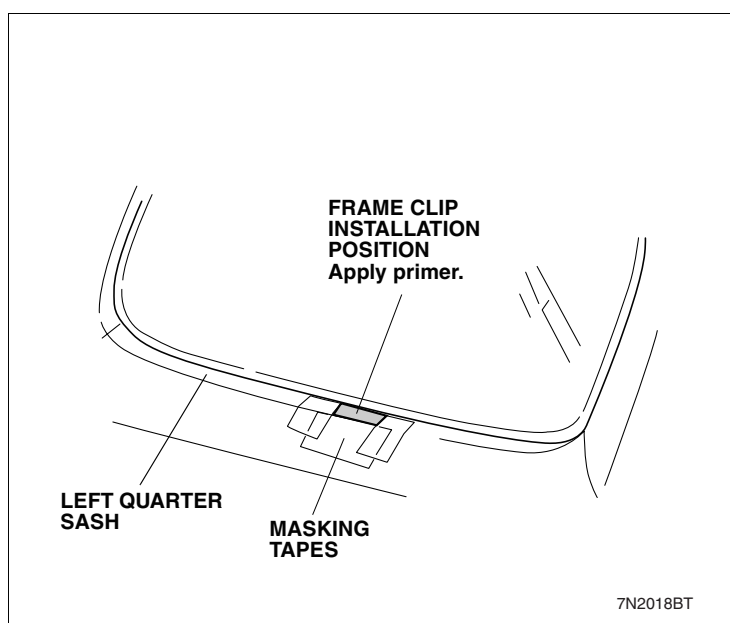


18. Remove the adhesive backing from the frame clip to install in the position shown.
- Note the installation direction of the frame clip.
19. Remove the masking tapes.

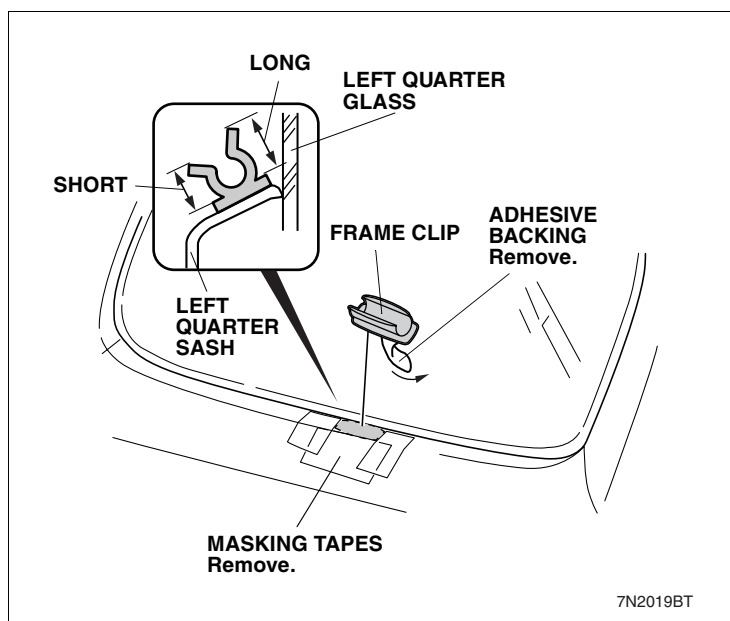

20. Align the edge of the glass clip with the mark on the left quarter glass, and attach the glass clip on the left quarter glass.
21. Erase the marks.

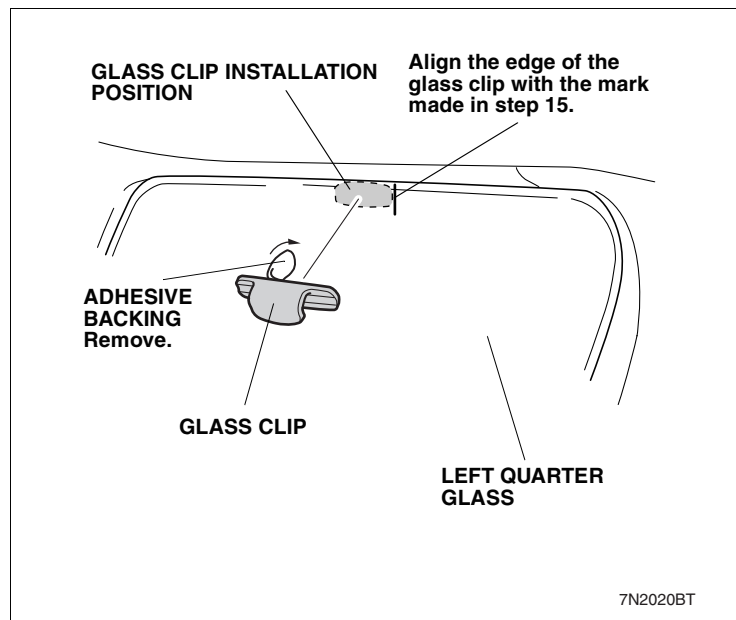


22. Install the quarter sunshade on the two clips in the numbered sequence of **1** and **2**.
23. Repeat the same work on the other side.

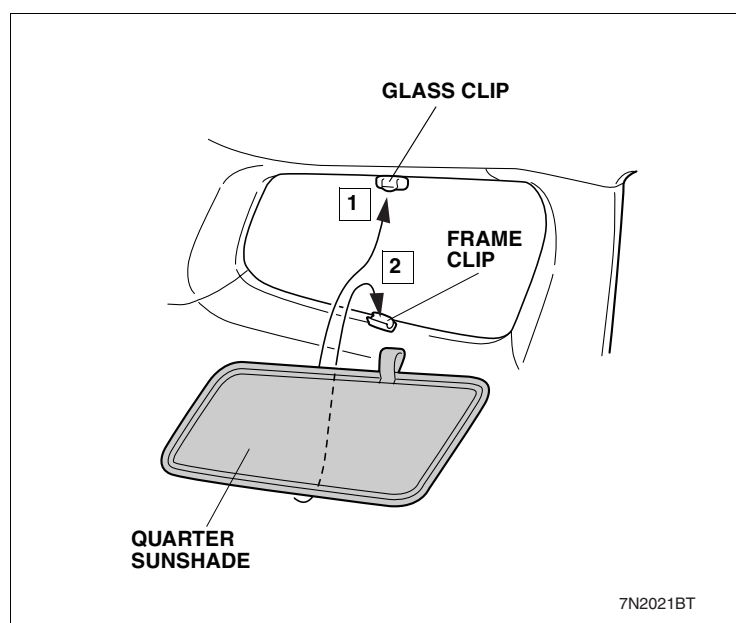


Installing the Rear Sunshade


24. Open the tailgate.
25. Check the positions where the frame clips are installed and clean the surfaces with the cleaner provided from the kit.

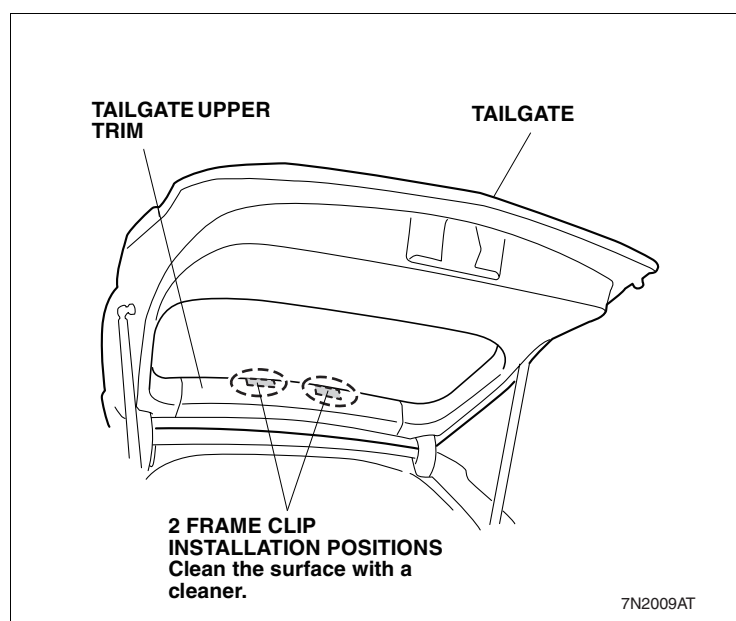


26. Using a felt-tip pen, make two marks in the positions shown.

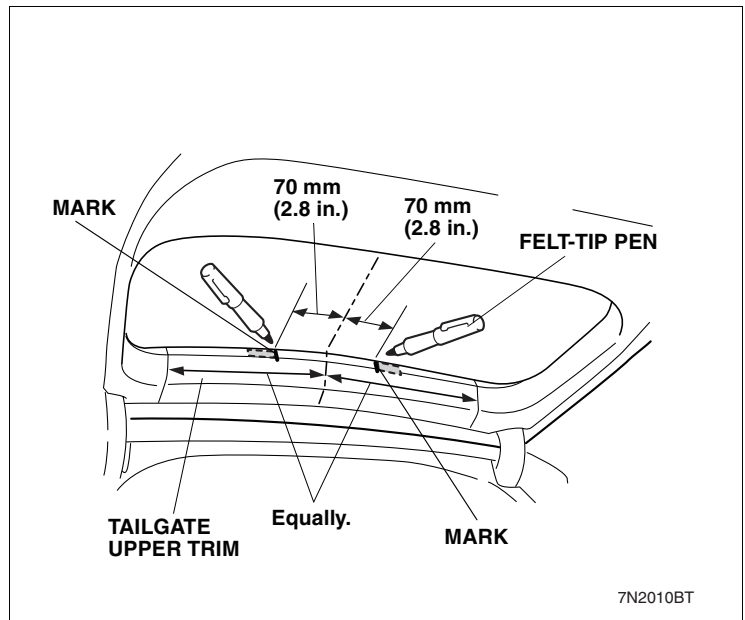


27. Temporarily position the frame clip on the tailgate upper trim aligning the end of the frame clip with the marks you made in step 26 and attach the pieces of masking tape as shown.

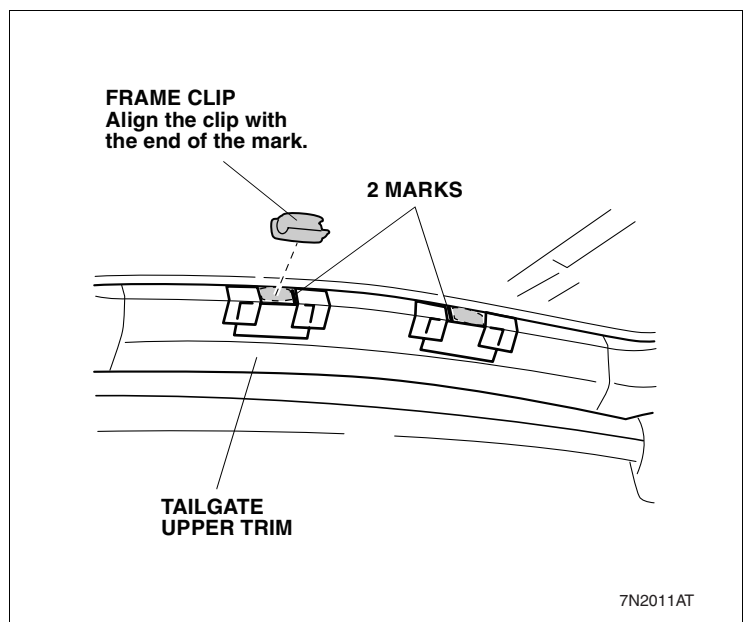

28. Apply primer to the parts of the tailgate upper trim enclosed with the masking tapes and let it dry thoroughly.

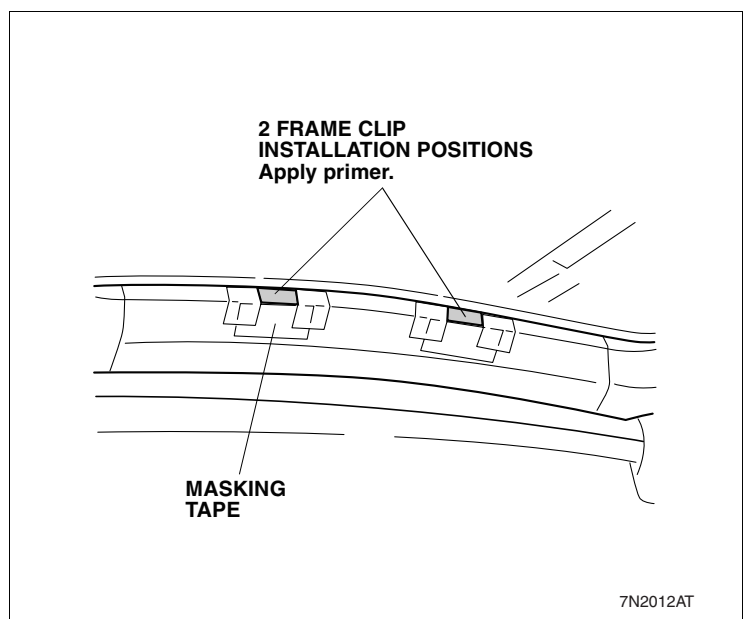

29. Remove the adhesive backing from each frame clip to install in the position shown.
 - Note the installation direction of the frame clips.
30. Remove the masking tapes.
31. Erase the marks.

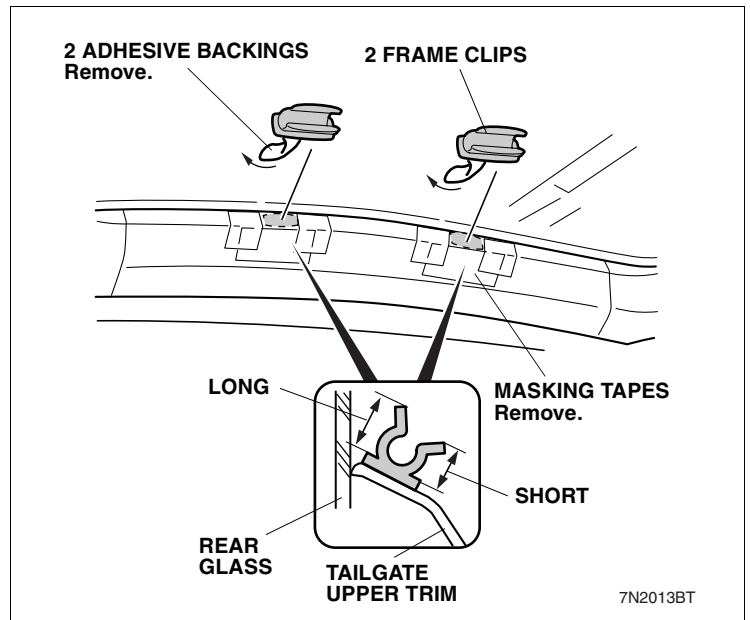

32. Install the left and right rear sunshades between the tailgate lower trim and the rear glass **1**.
33. Secure the left and right rear sunshades to the frame clips **2**.

