




## HON-CIVI-3-B

---

2 x

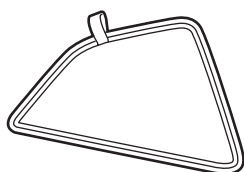


2 x

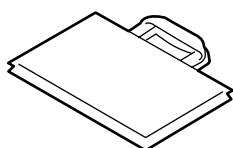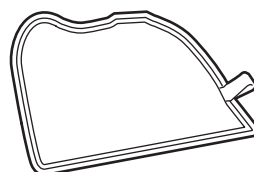

1 x



8 x



2 x

## Before You Begin:

- ## ■ SIDE WINDOWS

1. Install the three flat clips on the side sunshade as shown.
2. Insert the three flat clips into the gap between the glass and lining in the numbered sequence of **1** through **3**.




3. Repeat the procedure to install the side sunshade on the right side.
4. Remove the sunshades in the reverse order of installation.


## ■ TAILGATE

### Installing the Tailgate Sunshade


1. Open the tailgate.
2. Remove the rear shelf if it is mounted on the car.
3. Install the two joint clips on the tailgate sunshade.

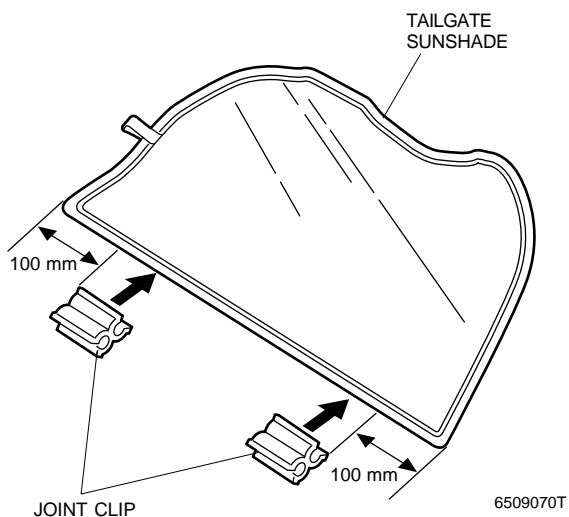


4. Install the tailgate sunshade aligning it with the tailgate.

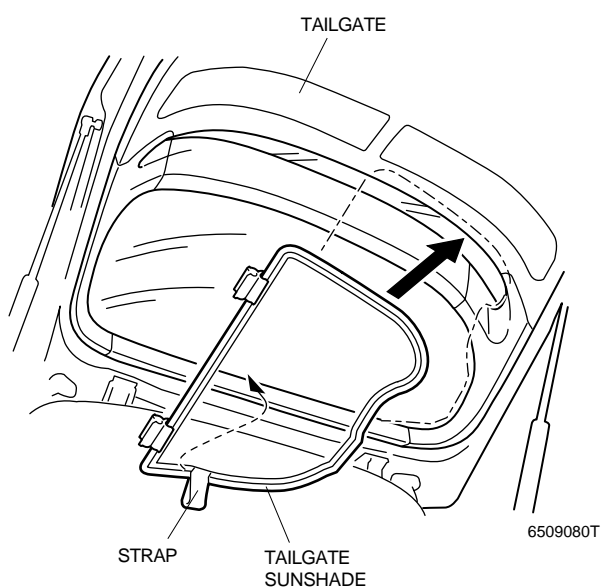

5. Install another tailgate sunshade aligning it with the tailgate. Join the two tailgate sunshades together with the two joint clips.

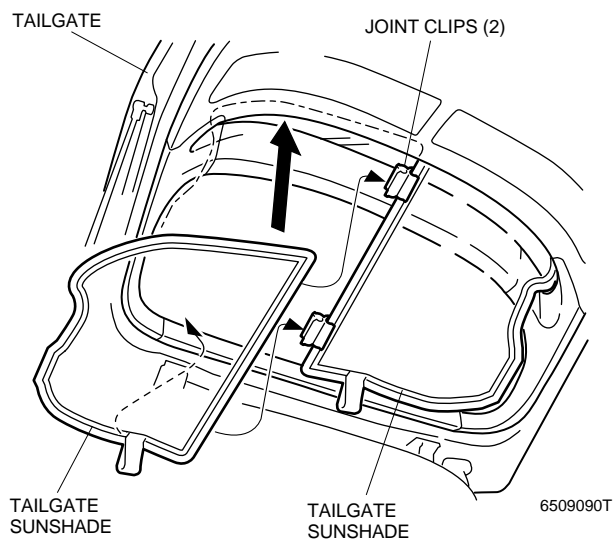


6. Secure the tailgate sunshades by inserting the two flat clips into the gap between the glass and trim.

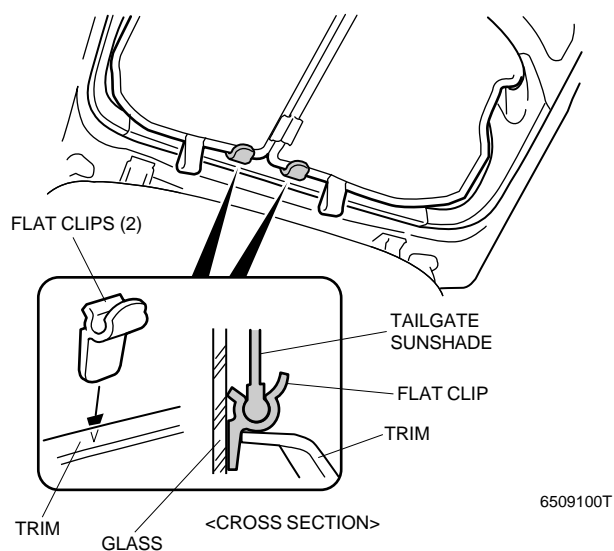

### Removing the Tailgate Sunshade

1. Release the tailgate sunshade from the flat clip by pulling the strap.
2. Remove the tailgate sunshade from the two joint clips and remove it.

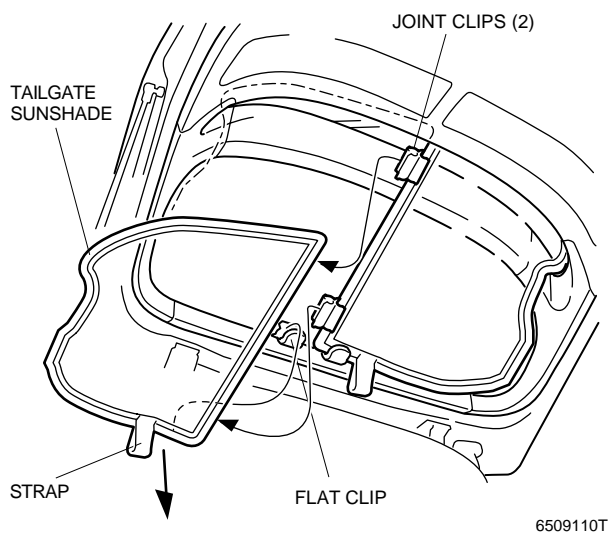

3. Remove another tailgate sunshade.