




## IGNIS 3dr - SUN BLIND INSTALLATION INSTRUCTIONS

PART NUMBER:


9904A-00038

VEHICLE DESCRIPTION:


IGNIS 3dr SUNBLINDS

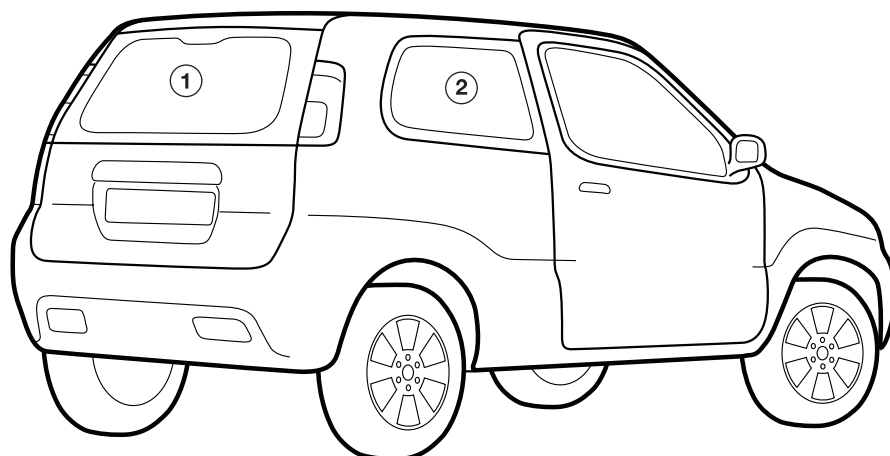

### HARDWARE KIT

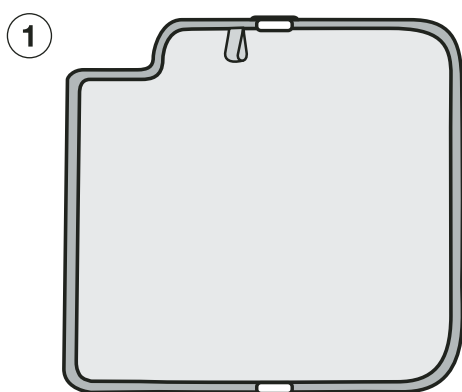

x2

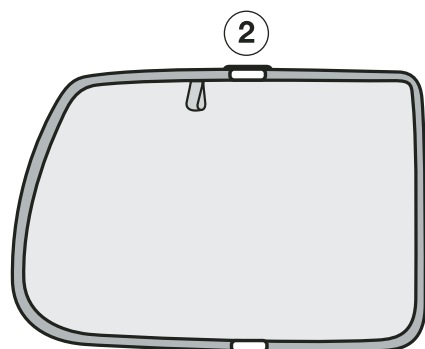


x2



x1



x1

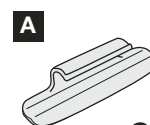







x8

### Warning

Read these fitting instructions carefully before you start the installation. Rear passenger windows must not be lowered more than 1/3 whilst the blinds are fitted and the vehicle is in motion. Blinds must not be used during the hours of darkness. On installation care must be taken not to scratch any paintwork with clips.



## IGNIS 3dr - SUN BLIND INSTALLATION INSTRUCTIONS

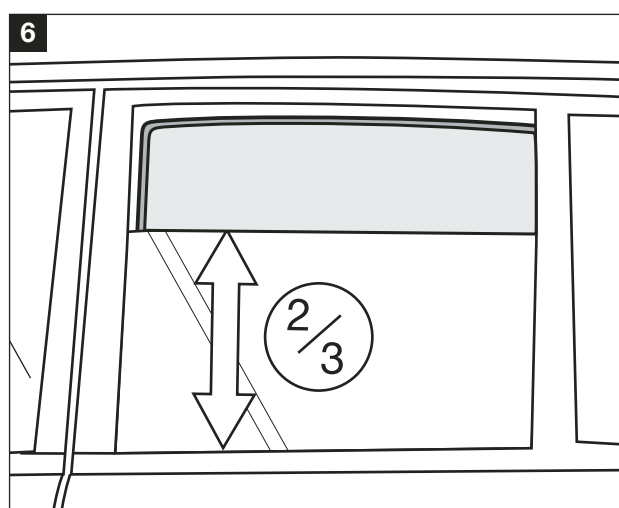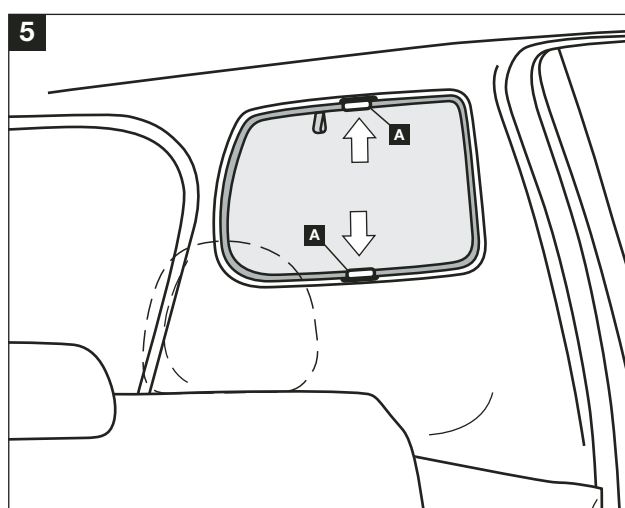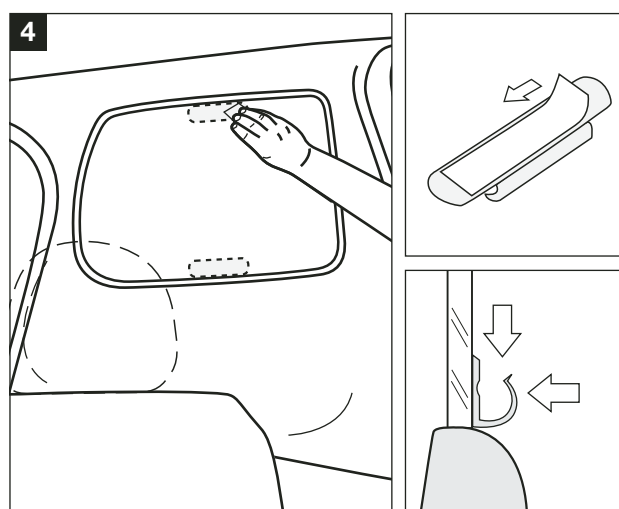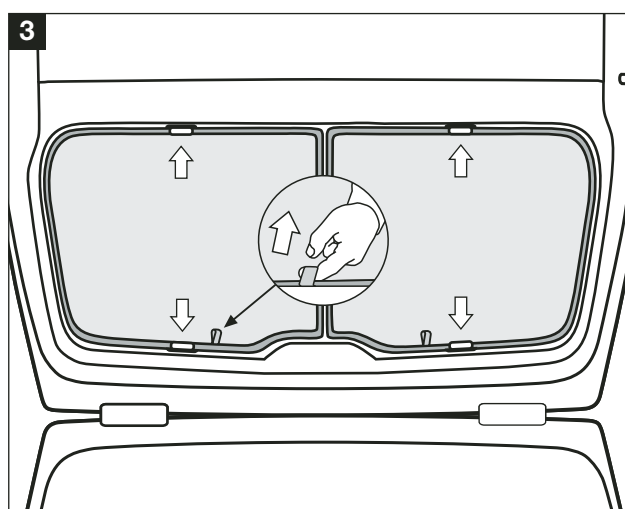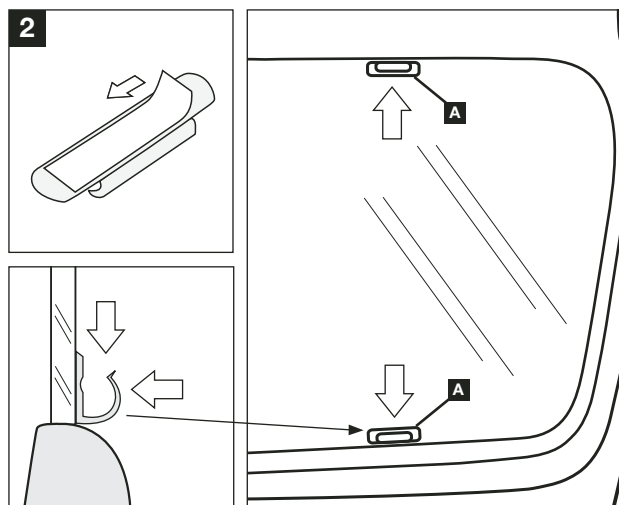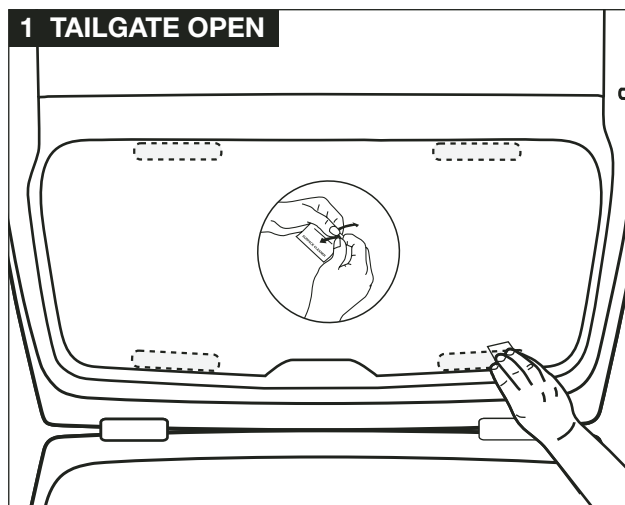

### **WARNING:**

Read these fitting instructions carefully before you start the installation. Rear passenger windows must not be lowered more than 1/3 whilst the blinds are fitted and the vehicle is in motion. On installation care must be taken not to scratch any paintwork with clips.